

SL3 Quick Start Guide for Upgrading Firmware



1

Install or Update LinkComm on Mobile Devices, PC or Mac OSx

- ▶ Install or upgrade to the latest LinkComm for your mobile device (Android or iOS) from:



- ▶ To install or update on your PC or Mac, download the latest version here:

<http://www.sutron.com/product/linkcomm/>

Click on the Downloads button in the middle of page. Choose the appropriate software from the list.



Downloads

2

Connect Devices to SL3

Connect SL3 via Wi-Fi or through USB or RS-232 cable

- ▶ Access Wi-Fi settings on your mobile device. Next locate and connect to the SL3, listed as SutronSL3_xxxx_yyyy, where xxxx may be set to a station name.
- ▶ USB cable SL3 to PC/Mac (OTG)
- ▶ RS232 cable SL3 to PC/Mac (if necessary)



SL3 RS232



SL3 USB (cable comes with SL3)



Wi-Fi Settings

3


Upgrade SatLink3 Firmware

- ▶ If LinkComm is already installed and you wish to upgrade SL3 firmware, navigate to the **Diagnostics Tab** and click/tap the **Upgrade Button**. Then **confirm upgrade**.

***Best Practices:** Consider downloading your log prior to upgrading.

Quick Tips: Upgrade Notification

- ▶ Note: When a new version of firmware is available, LinkComm lists the available update under Firmware Versions.
- ▶ Note: Mobile Device App also shows this information.

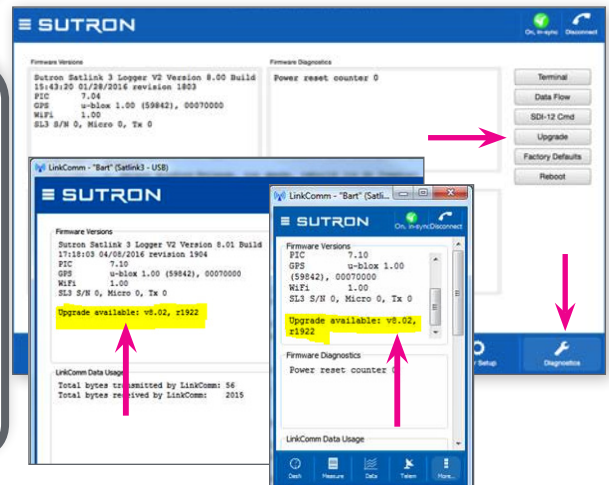

May 9, 2016

Sutron Corporation | 22400 Davis Drive | Sterling, VA 20164 | 703.406.2800 | www.sutron.com | sales@sutron.com

8800-1209



Hydrology



Meteorology



Tides/Oceans



Aviation



Geotechnical



Air Quality

SL3 Quick Start Guide USB Thumb Drive Firmware Upgrade*



*SatLink3 must run firmware that includes SL3 v8.01r1904 or later.

1

Download the Latest Version of LinkComm

- ▶ To install or update on your PC or Mac, download the latest version here:

<http://www.sutron.com/product/linkcomm/>

Click on the Downloads button in the middle of page.
Choose the appropriate software from the list.


Downloads



2

Copy SL3 Firmware to USB Thumb Drive

- ▶ On the thumb drive create a folder labeled "Sutron". Then create a sub-folder labeled "Satlink".
- ▶ Open the down-loaded LinkComm folder and copy firmware to the SatLink folder on the USB thumb drive. (ex: SL3EuropaActual_801r1904.s13u)

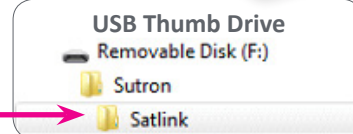

3

Insert USB Thumb Drive into Front Panel of SL3

SL3 will automatically:

- ▶ Download log file
- ▶ Download diagnostic file
- ▶ Download setup file
- ▶ Upgrade SL3 firmware



May 9, 2016

Sutron Corporation | 22400 Davis Drive | Sterling, VA 20164 | 703.406.2800 | www.sutron.com | sales@sutron.com

8800-1209



Hydrology



Meteorology



Tides/Oceans



Aviation



Geotechnical



Air Quality