



SC4500 Software Package 2.46 – 2023.2

Release Notes

This document contains details about the latest release of SC4500

Release date: August 2nd, 2023

What's new – Probe support

Adding support of Conductivity Ultrapure module




The Conductivity Ultrapure module for the SC4500 is a user installed or factory installed module that allows for connection of analog Polymetron conductivity sensors to the controller. This module works with Polymetron analog 8310, 8311, 8312, 8315, 8316, 8317 contacting conductivity sensors and 8398 inductive conductivity sensors. See manual for additional connection information.

Adding support of pH/ORP Ultrapure module




The pH and ORP Ultrapure module for the SC4500 is a user installed or factory installed module that allows for connection of analog Polymetron pH and ORP sensors to the controller. This module works with Polymetron analog 8362 pH and ORP sensors, 8350 pH sensors, and 8351 ORP sensors. See manual for additional connection information.

What’s new – Improvements

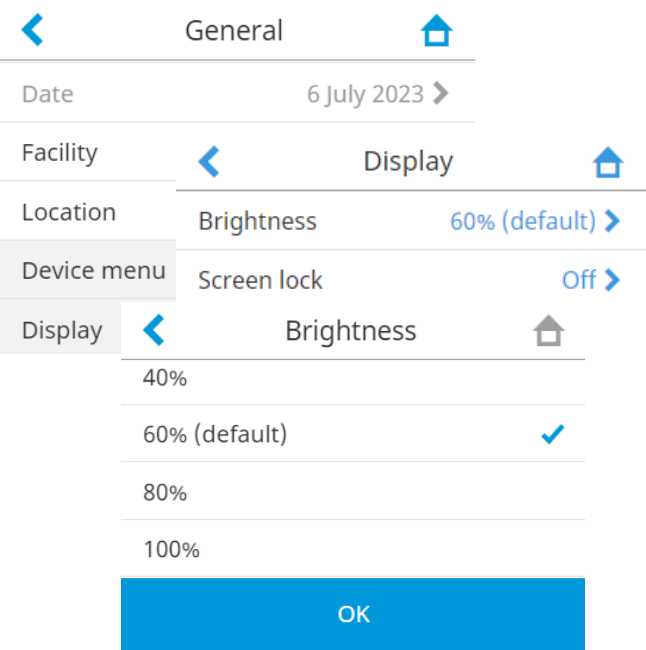

A new “Brightness” entry is added to the “Display” menu. It provides the possibility to change the backlight percentage of the SC4500 controller. By default, it will be set to 60%. It is highly recommended to keep this default setting as it will improve the durability of the SC4500 screen.

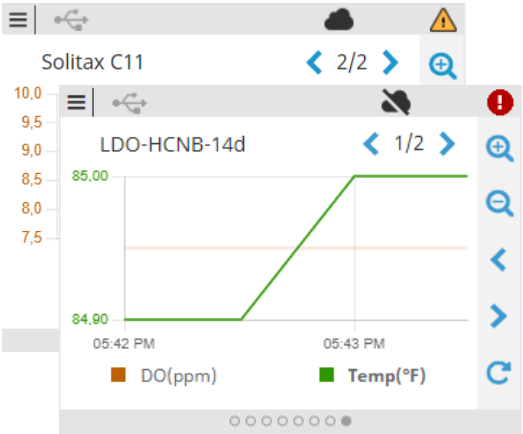

The selected parameter within the legend, is now put in bold to help identify it easier. While in the graph tile, new icons were added to the top right to showcase if there are any errors or warnings currently occurring.

Stability improvements

- Graph channel parameter name adds number when used to avoid mixed values

Feature improvements

- Improve “Hold” feature visibility within the carousel tiles

What's New – Claros

Improvement for Claros connected devices



Check this page for a full list of software releases, upgrades, and technical specifications for Claros, the Water Intelligence System from Hach.

<https://www.hach.com/claros/release-notes>

How to contact us

Website: <https://support.hach.com/app/ask>

North America

- Phone: 1- 800-227-4224 Option 2
- Email: techhelp@hach.com

Europe

- Phone: country specific
- Email: country specific