


AutoPoll

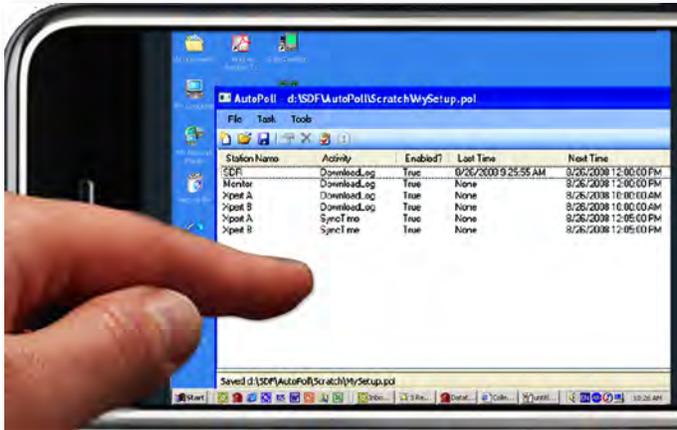

AutoPoll is Sutron software used to schedule periodic downloads of data and/or to collect data-on-demand from multiple Sutron hydro-met station loggers and logging sensors, including the following:

- ▶ Xpert and 9210 XLite
- ▶ 8310
- ▶ Satlink
- ▶ GPRS-Link, CDMA-Link
- ▶ Stage Discharge Recorder
- ▶ Radar Level Recorder
- ▶ Constant Flow Bubbler(single and dual orifice)

FEATURES

- ▶ Schedule periodic downloads of data from multiple DCPs.
- ▶ Collect data-on-demand from multiple DCPs
- ▶ Download to CSV files
- ▶ View data with any text editor (i.e., Notepad)
- ▶ Import data to MS Excel spreadsheet
- ▶ Works with Xpert, XLite, Stage Discharge Recorder, Radar Level Recorder, GPRSLink, CDMALink, SatLink, Constant Flow Bubbler.
- ▶ Transfer setups to & from DCPs
- ▶ Synchronize time between device and PC
- ▶ Communications: Direct Connect, Modem, Cell Modem, TCP/IP Virtual Com Port
- ▶ Protocols: SCP, Modbus, Command Line
- ▶ Runs on your PC as an app or as a service



ORDERING	
8204-1096	Autopoll License