

EZ1000 Series Online Colorimetric Boron Analyzer

Applications

- Wastewater
- Drinking Water
- Power and Steam Generation
- Process/Production Water
- Surface Water



Online colorimetric analysis of dissolved Boron in water

Results you can rely on

EZ1000 Boron Analyzers achieve excellent precision and accuracy. At the heart of the colorimeter there is a compact photometer assembly developed especially for the EZ Series. Consumption of reagents is reduced by low volume analysis, yet high sensitivity is assured by a long optical path length. The limit of detection is in the low $\mu\text{g/L}$ range.

Smart automatic features for calibration, validation, priming and cleaning are embedded in the controller software and contribute to analytical performance, maximized uptime and negligible operator intervention. Precision micropumps dose all reagents. Sample lines and analysis vessel are cleaned with demineralized water to eliminate cross contamination between samples. Electronic and wet-chemical part of the analyzer are strictly separated. A transparent door allows for instant visual inspection of the wet part.

Flexibility that meets your needs

EZ Series Boron Analyzers come in an attractive, ergonomic mainframe with a compact footprint. All hardware is controlled by the integrated industrial panel PC. The modular build allows for the analyzer to match your application and operational needs.


- The standard measuring range can be narrowed by a different calibration range or extended via internal dilution options.
- Analog and digital output options
- Multiple stream analysis for up to 8 sample streams

Technical Data*

Parameter	Boron B(III), dissolved
Measurement Method	Colorimetric measurement at 405 nm using Azomethine-H
Range	100 - 500 µg/L B(III) Optional: - 0.05-0.5 mg/L - 0.1-1 mg/L - 0.2-2 mg/L - 1-10 mg/L (with internal dispenser dilution (factor 5)) - 2-20 mg/L (with internal dispenser dilution (factor 10)) - 5-50 mg/L (with internal dispenser dilution (factor 25))
Precision	Better than 2% full scale range for standard test solutions
Lower Limit of Detection (LOD)	100 µg/L
Interferences	Aluminium, Iron, Copper, Titanium and Zinc ions in high concentrations may interfere. Large amounts of color and turbidity interfere. Fats, oil, proteins, surfactants and tar.
Cycle Time	15 min (dilution + 5 min)
Automatic cleaning	Yes
Calibration	Automatic, 2-point; frequency freely programmable
Validation	Automatic; frequency freely programmable
Ambient Temperature	10 - 30 °C ± 4 °C deviation (50 - 86 °F ± 7.2 °F deviation) at 5 - 95% relative humidity (non-condensing)
Reagent Requirements	Keep refrigerated.
Sample Pressure	By external overflow vessel
Sample Flow Rate	100 - 300 mL/min
Sample Temperature	10 - 30 °C (50 - 86 °F)
Sample Quality	Maximum particle size 100 µm, < 0.1 g/L; Turbidity < 50 NTU
Power	100 - 240 VAC, 50/60 Hz Max. power consumption: 120 VA
Instrument Air	Dry and oil free according to ISA-S7.0.01-1996 quality standard for instrument air
Demineralized Water	For rinsing / dilution
Drain	Atmospheric pressure, vented, min. Ø 32 mm
Earth Connection	Dry and clean earth pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm ²
Analog Outputs	Active 4 - 20 mA max. 500 Ohm load, standard 1, max. 8 (option)
Digital Outputs	Optional: Modbus (TCP/IP, RS485)
Alarm	1 x malfunctioning, 4 x user-configurable, max. 24 VDC/0.5 A, potential free contacts
Protection Class	Analyzer cabinet: IP44 / Panel PC: IP65
Material	Hinged part: Thermoform ABS, door: plexiglass Wall section: Galvanized steel, powder coated
Dimensions (H x W x D)	690 mm x 465 mm x 330 mm
Weight	25 kg (55 lbs.)
Certifications	CE compliant / ETL certified

*Subject to change without notice.

Dimensions

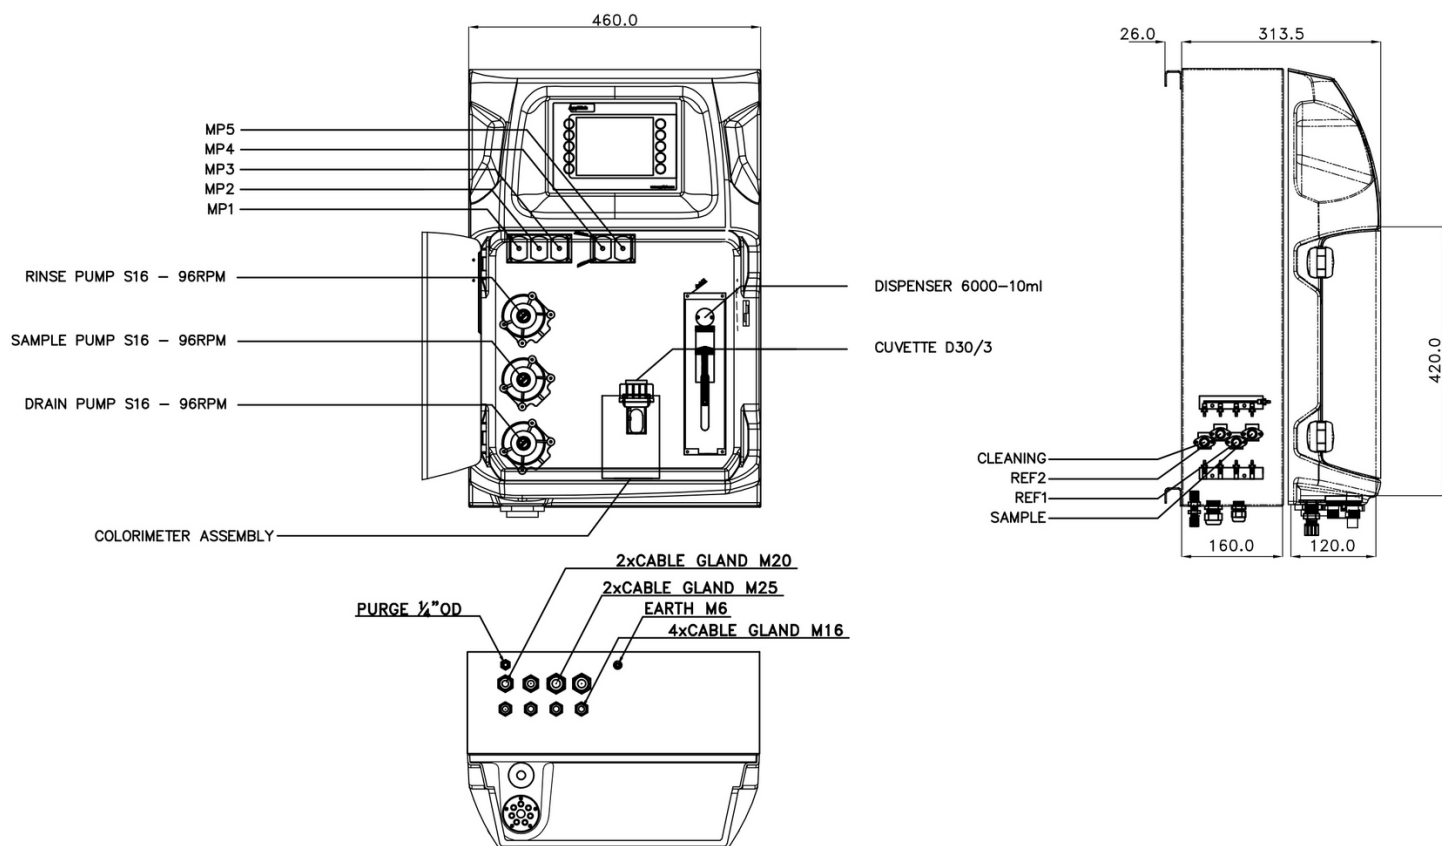

Hach Service

With Hach Service, you have a global partner who understands your needs and cares about delivering timely, high-quality service you can trust. Our Service Team brings unique expertise to help you maximize instrument uptime, ensure data integrity, maintain operational stability, and reduce compliance risk.

Order Information - Part Number Configurator

Boron, dissolved B(III), 100 - 500 µg/L	EZ1004.52	X	X	X	X	X	2
Measurement range settings / Dilution options							
Standard range		0					
Internal micropump dilution (factor 4)		1					
Internal micropump dilution (factor 8)		2					
Internal dispenser dilution (max. factor 100)		5					
Power supply							
Standard 100 - 240 VAC, 50/60 Hz			0				
Number of sample streams							
1 stream					1		
2 streams					2		
4 streams					4		
8 streams					8		
Outputs							
1x mA						1	
2x mA						2	
4x mA						4	
8x mA						8	
1x mA + Modbus RS485						E	
2x mA + Modbus RS485						F	
4x mA + Modbus RS485						H	
8x mA + Modbus RS485						P	
1x mA + Modbus TCP/IP						I	
2x mA + Modbus TCP/IP						J	
4x mA + Modbus TCP/IP						L	
8x mA + Modbus TCP/IP						T	
No adaption, standard version							0