



Liquid-Phase H₂S Monitoring

Using Liquid-Phase H₂S Measurement To Protect Sewer Networks and Workers



Summary

While the estimated service life of steel-reinforced concrete pipe carrying stormwater can be 100 years, sanitary-sewer networks have a lot more working against them. Here are multiple considerations for using liquid-phase measurements to quantify hydrogen-sulfide (H₂S) concentrations more consistently, identify potential threats to worker health and infrastructure longevity, and support better strategies for mitigating those risks.

The Hydrogen-Sulfide Problem in a Nutshell

Perhaps the most prominent issues that come to mind when discussing H₂S concentrations in wastewater collection networks are customer complaints about odors and worker-safety issues when working in hazardous enclosed spaces. But the total story extends even beyond that, into the out-of-sight, out-of-mind realm of underground infrastructure.

According to this U.S. EPA document on hydrogen sulfide corrosion and its consequences, "Hydrogen sulfide corrosion in wastewater systems often results in costly, premature replacement or rehabilitation of systems used in the transport and treatment of wastewater. Sewers designed to last 50 to 100 years have failed due to hydrogen sulfide corrosion in as little as 10 to 20 years. Electrical and mechanical equipment with an expected source life of 20 years has required replacement in as little as five years."

Keeping A Closer Eye On High-Profile Locations

Key areas for monitoring H₂S presence include collection-network force mains with anaerobic conditions and lift stations or wet wells where turbulence exacerbates H₂S odor problems and enclosed spaces pose dangers for maintenance workers. The extent of monitoring will depend on how many lift stations, wet wells, and miles of force mains there are in the system, and on the hydraulic retention times (HRT) for each of them.

Using liquid-phase sensors (Figure 1) offers multiple advantages in terms of more versatile mounting options and more appropriate representation of H₂S concentrations. They can range from simply knowing wastewater hydrogen-sulfide concentrations to monitoring system corrosion to adjusting wet-well or force-main HRTs to dosing chemicals to neutralize the H₂S.



Figure 1. Inserting a liquid-phase sensor directly into the wastewater flow enables a more complete representation of the true concentration of H₂S in that flow. This contrasts favorably against gas-phase-only sensors that can under-represent the scope of the problem based on the distance between the water and the sensor or the amount of turbulence in a wet well.

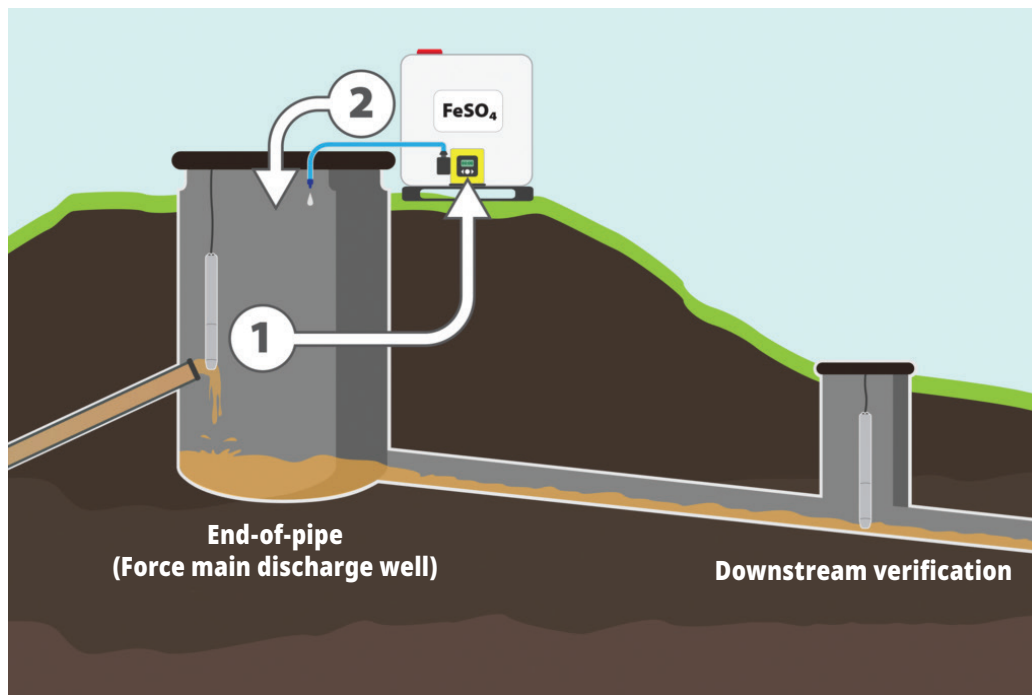


Figure 2. Monitoring hydrogen-sulfide concentrations directly in the water at the discharge well of a force main (1) can provide instantaneous readings to control automatic dosing (2). Installing a second sensor downstream can verify the outcome of those treatments and signal any necessary adjustments.

Remotely monitoring accurate measurements from multiple locations on a single dashboard can go a long way toward reducing downstream problems with the most cost-effective treatments available. Getting a true picture of the extent of the problem in order to evaluate the appropriate decision-tree options for treatment starts with more accurate detection closer to the cause of the problem (Figure 2).

Added Versatility, Improved Understanding

Comparing the improved opportunities offered by portable, liquid-phase H₂S sensors reveals cost-saving and operational-improvement benefits.

- **Continuously measuring H₂S directly in the water** provides an instant, accurate value for the highest potential concentration at that specific point in the collection network—as compared to readings taken in the air above. It can also eliminate chemical-dosing lag time between a significant change of hydrogen-sulfide concentration and the point where that is detected by a gas-phase sensor mounted high in a manhole structure (Figure 3 see next page).
- **The capacity to move a sensor quickly from location to location** speeds the ability of a short-term measurement campaign to survey potential new problem areas throughout the network—more efficiently and affordably than grab-sampling.
- **Optimizing conditions in the collection network also provides benefits** for cost-effective performance efficiency downstream in the network or the wastewater treatment plant (WWTP) itself. For example, overdosing nitrate in the collection network might address hydrogen-sulfide concentrations there, but incur added costs to remove the excess during the WWTP processes. Continuous hydrogen-sulfide monitoring can minimize that risk.
- **Also, when a single, portable, remote sensor offers flexibility for both gas-phase and liquid-phase sampling**, it can help to pinpoint the source of a specific odor complaint and then quantify the exact levels of odor-causing H₂S in the wastewater at that location.

Liquid-phase H₂S measurements reveal new insights



Figure 3. This chart shows differences in continuous readings from a liquid-phase sensor installed directly in the wastewater flow (blue) vs. gas-phase sensors installed just above the surface of the water (green) or near the top of a manhole (red). Notice the lower overall readings and periodic dropout of H₂S values on the green line, representative of differences between pumping inactivity and turbulent flows that release more H₂S gas. Note how measurements taken near the top of the manhole do not reflect the highest incidences of H₂S.

Gaining Operational Benefits

Short-term and long-term monitoring data can help to inform the analyses required for chemical-feed optimization, siting of dosing stations, informing consults relative to future planning of new collection-network designs, etc. And once the best locations for permanently mounted sensors are identified, measuring H₂S in the wastewater there requires relatively few liquid-phase sensors as opposed to a fleet of gas-phase sensors that need to be rotated in and out on a periodic basis. Here are some common wastewater-collection-network applications that benefit from continuous liquid-phase monitoring:

- **Troubleshooting Odor Complaints.** The ability to identify actual H₂S concentrations—or the lack thereof—in areas of customer complaints helps utilities resolve problems quickly or prove to the complainant that odors are being caused by conditions outside the wastewater collection network.
- **Identifying Potential Corrosion Issues.** Continuous monitoring at key locations—outlets from force mains, wet wells where water turbulence releases H₂S from the water into the air, and sewer lines leading to the WWTP—enables utilities to neutralize the potential for corrosion before concrete or metallic infrastructure is compromised.
- **Optimizing H₂S Chemical Dosing Control.** Managing chemical dosing based on continuous real-time readings of changing diurnal flow characteristics enables utilities to match the exact chemical dosing needed. That saves the expense of overdosing and minimizes the risk of biological process upsets.

- **Refining Collection-Network Maintenance Strategies.**

Continuous monitoring of H₂S levels also makes it easier to monitor potential rates of deterioration in collection-network infrastructure and adjust related maintenance scheduling. That includes using those readings to complement video inspections in identifying whether deterioration is accelerating or not. It can even include reducing the frequency of jet-cleaning and inspections based on low H₂S concentrations.

- **Monitoring Increased Loads From New Construction.**

Because adding new hookups to an existing sewer system can change the dynamics of operation, monitoring water composition in areas of new construction can quickly identify where operational changes are required.

- **Coordinating Among Regional Utilities.** When regional treatment plants accept inputs from multiple decentralized wastewater districts, monitoring H₂S in the separate inflows can make an important difference in coordinating how individual sources and combined flows are handled.

- **Setting Industrial Wastewater Rates Fairly.** Monitoring the inflow from industrial customers who discharge wastewater with higher-than-normal concentrations of H₂S can help utilities establish more favorable rates for treating the discharge as it is or convince those customers to perform appropriate pretreatment interventions.



World Headquarters: Loveland, Colorado USA | hach.com

United States 800-227-4224 fax: 970-669-2932 email: orders@hach.com
Outside United States 970-669-3050 fax: 970-461-3939 email: int@hach.com

©Hach Company, 2021. All rights reserved.

In the interest of improving and updating its equipment, Hach Company reserves the right to alter specifications to equipment at any time.

DOC043.53.30726.Dec21