

Digital Controller SC4500

Applications

- Wastewater
- Drinking Water
- Industrial
 Other



Ready for Now. Ready for the Future.

Technologies are advancing rapidly, providing new levels of convenience, accuracy, and efficiency. Which is exactly why the SC4500 Controller from Hach[®] is designed to integrate easily into your current system while allowing you to upgrade as your capabilities advance, without having to replace inventory. With a wide range of analog and digital connectivity options and the availability of intelligent instrument and data management features, the SC4500 unlocks the future, today.

Easy Adoption

The familiar experience of a modern touchscreen, the ability to use your current Hach sensors, and the same footprint as the SC200, make installation and integration of the SC4500 Controller seamless.

No Time for Downtime

The SC4500's built-in predictive diagnostic software ensures measurement confidence and reduces the risk of unexpected equipment downtime by enabling proactive maintenance planning via MSM, including step-by-step instructions.

The Connectivity Options You Need

The Controller provides local communication to SCADA or a PLC, as well as remote access through a secure, cloudbased connectivity option to integrate with Claros, the Water Intelligence System from Hach. From analog and advanced digital protocols to Wi-Fi, cellular or LAN, the SC4500 gives you the flexibility to adapt in a rapidly changing world.

The power of Hach's real time controls (RTC) software is now hosted on the SC4500 controller. Take advantage of the potential energy, chemical and labor savings, from a simple and environmentally friendly solution.

Technical Data*

Cennical Data			
Description	Microprocessor-controlled and menu-driven controller that operates the sensor		
Dimensions	1/2 DIN - 144 x 144 x 192 mm (5.7 x 5.7 x 7.6 in.)		
Weight	3.7 lb (controller only, w/o modules)		
Display	3.5-inch TFT colour display with capacitive touchpad		
Enclosure Rating	UL50E type 4X, IEC/EN 60529–IP 66, NEMA 250 type 4X Metal enclosure with a corrosion-resistant finish		
Operating Temperature Range	-20 to 60 °C (-4 to 140 °F) (8 W (AC)/9 W (DC) sensor load) -20 to 45 °C (-4 to 113 °F) (28 W (AC)/20 W (DC) sensor load) Linear derating between 45 and 60 °C (-1.33 W/°C)		
Storage Conditions	-20 - 70 °C (-4 - 158 °F), 0 - 95% relative humidity, non-condensing		
Altitude	3000 m (9842 ft) maximum		
Installation Category	Category II		
Indoor/Outdoor	Outdoor installation in direct sunlight or UV radiation requires UV protection screen and/or sunroof		
Pollution Degree	4		
Protection Class	I, connected to protective earth		
Power requirements	AC controller: 100-240 VAC ±10%, 50/60 Hz; 1 A (28 W sensor load) DC controller: 24 VDC +15% -20%; 2.5 A (20 W sensor load)		
Measurements	Two device digital SC connectors		
	Two relays (SPDT);		
	Wire gauge: 0.75 to 1.5 mm ² (18 to 16 AWG)		
Relays	AC controller Maximum switching voltage: 100 - 240 VAC Maximum switching current: 5 A Resistive/1 A Pilot Duty Maximum switching power: 1200 VA Resistive/360 VA Pilot Duty DC controller		
	Maximum switching voltage: 30 VAC or 42 VDC Maximum switching current: 4 A Resistive/1 A Pilot Duty Maximum switching power: 125 W Resistive/28 W Pilot Duty		
	Analog: Five 0-20 mA or 4-20 mA analog outputs on each analog output module Up to two analog Input modules (0-20 mA or 4-20 mA). Each input module replaces a digital sensor input.		
Communication (optional)	Digital: Profibus DPV1 module Modbus TCP Profinet IO module Ethernet IP module		
Network Connectivity	LAN: Two Ethernet connectors (10/100 Mbps) Cellular: External 4G Wi-Fi		
USB Port	Used for data download and software upload. The controller records approximately 20,000 data points for each connected sensor.		
Compliance Certifications	CE. ETL certified to UL and CSA safety standards (with all sensor types), FCC, ISED, KC, RCM, EAC, UKCA, SABS, C (Morocco)		
	12 months		
Warranty			

*Subject to change without notice.



Compatible Instruments / Software Version (Release Year)

Compatible Sensors and Analysers / Software Version (Release Year)

Amtax sc / V2.30 (2018) or higher A-ISE sc / V1.02 or higher

3

AN-ISE sc / V1.08 (2013) or higher

N-ISE sc / V1.02 or higher

Nitratax clear sc, Nitratax eco sc, Nitratax plus sc / V3.13 (2013) or higher

NT3100sc/NT3200sc

Phosphax sc / V2.30 (2018) or higher

Phosphax sc LR/MR/HR / V1.01 (2018) or higher

TSS sc / V41.73 (2013) or higher

Solitax sc / V2.20 (2013) or higher

TU5300sc, TU5400sc / V1.34 (2017) or higher

SS7 sc (in Bypass) / V1.01 (2006) or higher Ultraturb sc / V3.06 (2017) or higher

Dimensions

1720E / V2.10 (2006) or higher Sonatax sc / V1.15 (2016) or higher CL17sc / V2.7 (2019) or higher CL10sc / V1.14 (2013) or higher 9184sc, 9185sc, 9187sc* / V2.03 (2013) or higher

Uvas plus sc / V3.01 (2017) or higher

LDO 2 sc* / V1.22 (2013) or higher

3798sc* / V2.03 (2013) or higher

3700sc + Inductive Conductive Digital 6120800 / V3.00 (2017) or higher

3422sc + Contacting Conductive Digital 6120700 / V3.00 or higher

3700 analog + Conductivity Module LXZ525.99.D0004

3400 analog + Conductivity Module LXZ525.99.D0004

pHD sc*, pHD-S sc / V3.10 (2016) or higher

1200-S sc* / V2.04 (2013) or higher

pHD analog + Digital Gateway 6120500 / V3.00 (2017) or higher

pHD analog + pH/ORP Module LXZ525.99.D0003

RC and PC analog sensor + Digital Gateway for conventional analog pH and ORP sensors 6120600 / V3.00 (2017) or higher

RC and PC analog + pH/ORP Module LXZ525.99.D0003


8362sc* / V3.00 (2017) or higher

Polymetron pH/ORP analog + Ultrapure pH/ORP Module LXZ525.99.D0007

Polymetron Conductivity analog + Ultrapure Conductivity Module LXZ525.99.D0006

GS1440 and GS2440EX Sensors $\rm H_2S$ FP360 sc / V1 or higher

*Hardware Version1 of instrument is not supported

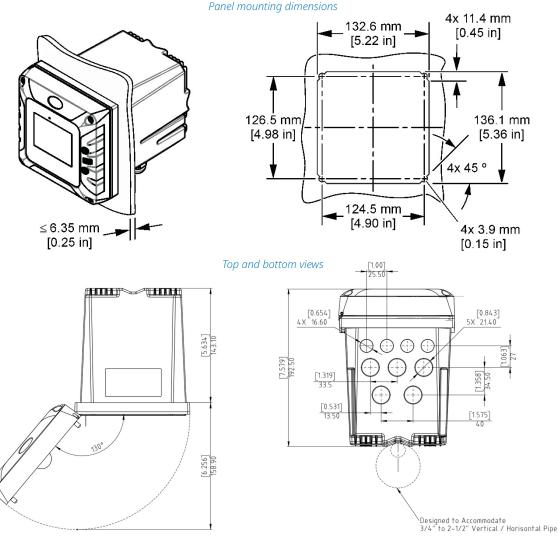



Door Opening Details

Order Information

Controller

LXV525.99A11551	SC4500 Controller, Prognosys, 5x mA Output, 2 digital Sensors, without plug
LXV525.99E11551	SC4500 Controller, Prognosys, 5x mA Output, 2 digital Sensors, US plug
LXV525.99A11541	SC4500 Controller, Prognosys, 5x mA Output, 1 digital Sensor, 1 mA Input, without plug
LXV525.99E11541	SC4500 Controller, Prognosys, 5x mA Output, 1 digital Sensor, 1 mA Input, US plug
LXV525.99AA1551	SC4500 Controller, Claros-enabled, 5x mA Output, 2 digital Sensors, without plug
LXV525.99EA1551	SC4500 Controller, Claros-enabled, 5x mA Output, 2 digital Sensors, US plug
LXV525.99AA1541	SC4500 Controller, Claros-enabled, 5x mA Output, 1 digital Sensor, 1 mA Input, without plug
LXV525.99EA1541	SC4500 Controller, Claros-enabled, 5x mA Output, 1 digital Sensor, 1 mA Input, US plug

Additional configurations are available. Please contact Hach Technical Support or your Hach representative.

Accessories

LXZ524.97.00042	SC4x00 Input Module
LXZ525.99.D0002	SC4x00 mA Output Module (5 Outputs)
LXZ525.99.C0002	SC4500 Ethernet IP Upgrade Kit
LXZ525.99.C0003	SC4500 Modbus TCP/IP Upgrade Kit
LXZ525.99.00026	SC4500 Ethernet Cable M12 to M12 / C1D2, 10 m
LXZ525.99.00017	SC4500 USB Stick
LXZ524.99.00004	SC4x00 UV Protection Screen
LXZ524.99.00005	SC4x00 UV Protection Screen with Sunroof
LXZ524.99.00033	SC4x00 Sunroof Visor
LXZ524.99.00036	SC4x00 Mounting Hardware Sunroof with Visor
LXZ524.99.00037	SC4x00 Sunroof with Visor
LXZ525.99.D0003	SC4500 pH/ORP module
LXZ525.99.D0004	SC4500 Conductivity module
LXZ525.99.D0006	SC4500 Ultrapure pH/ORP module
LXZ525.99.D0007	SC4500 Ultrapure Conductivity module



This instrument connects to Claros, Hach's innovative Water Intelligence System. Claros allows you to seamlessly connect and manage instruments, data, and process - anywhere, anytime. The result is greater confidence in your data and improved efficiencies in your operations. To unlock the full potential of Claros, insist on Claros Enabled instruments.

United States



With Hach Service, you have a global partner who understands your needs and cares about delivering timely, high-guality service you can trust. Our Service Team brings unique expertise to help you maximize instrument uptime, ensure data integrity, maintain operational stability, and reduce compliance risk.



World Headquarters: Loveland, Colorado USA | hach.com

800-227-4224 fax: 970-669-2932 Outside United States 970-669-3050 fax: 970-461-3939 email: orders@hach.com email: int@hach.com

©Hach Company, 2023. All rights reserved. In the interest of improving and updating its equipment, Hach Company reserves the right to alter specifications to equipment at any time. DOC053.53.35316.Sep23